
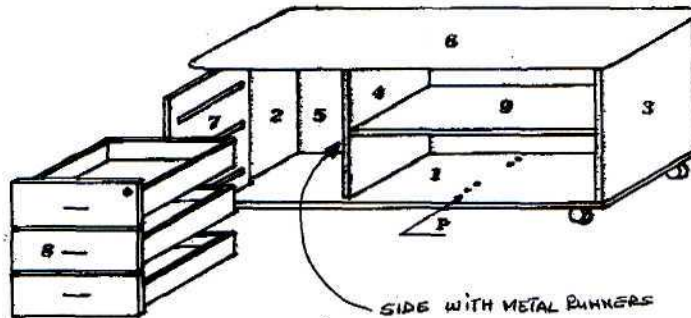


GOODFURNITURE
MADE IN ITALY

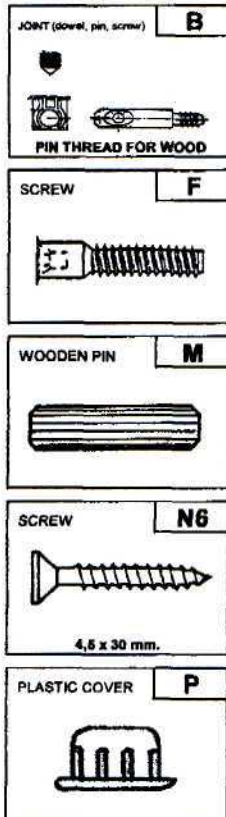

ASSEMBLING INSTRUCTIONS:

1) EXTENSION ART. "AR 3C" - WITH DRAWERS
(DRAWERS FIXABLE RIGHT OR LEFT SIDE)



EXTENSION WITH DRAWERS ON LEFT SIDE:

- 1) JOIN BOTTOM (1) TO EXTERNAL SIDES (2) (3) AND INNER SIDE (4) (SCREW "F").
- 2) JOIN BACK (5) TO BOTTOM (3) (PIN "M") AND (SCREW "F").
- 3) JOIN TOP (6) TO SIDES (1), (2), (4) (JOINT "B").
- 4) INSERT SIDE (7) AND FIX IT TO SIDE (2) (SCREW "N6").
- 5) SCREW WHEELS TO BOTTOM (1).
- 6) INSERT DRAWERS (8).
- 7) INSERT SHELF (9).
- 8) COVER UNUSED HOLES (PLUGS "P").

EXTENSION WITH DRAWERS ON RIGHT SIDE:

- ASSEMBLE EXTENSION AS ABOVE FIXING SIDE (4) TO SIDE (3) AND PUT SIDE (7) ON "P" POSITION.

AR 3C - ISTRUZIONI MONTAGGIO - INGLESE - REVISED: 17/03/2005









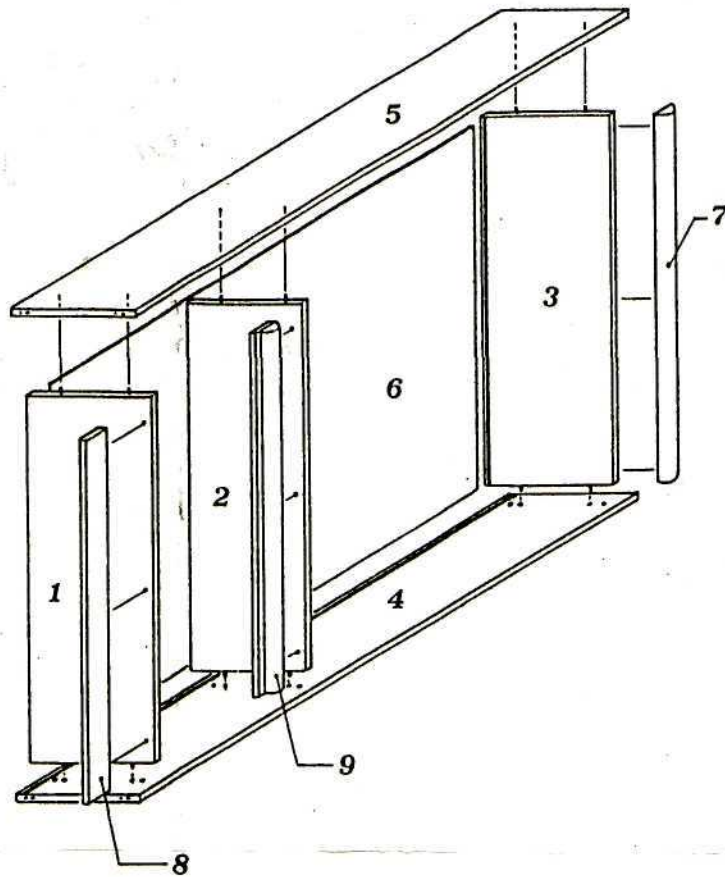
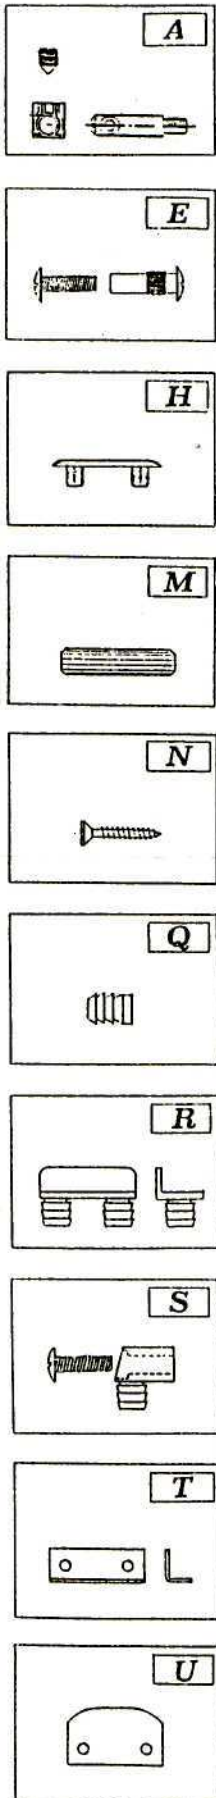


ASSEMBLING INSTRUCTIONS: "BOOKCASE"

- INSERT WOODEN PIN "M" IN SUITABLE HOLES OF BOTTOM (1), INTERNAL BASE (2), TOP (3) AND SKIRTING BOARD (8).
- APPLY NYLON BUSHES "Q" IN SUITABLE HOLES OF INTERNAL BASE (2). IN THE OTHER SIDE APPLY LOCK-LATCH "R".
- APPLY NYLON BUSHES "Q" TO SUITABLE HOLES OF SIDES (4) AND (5) AND INSERT IN THE LOWER PART PLASTIC SLIDING "H".
- APPLY TRAPEZOID JOINS "S" TO TOP (3) AND FRAMES (7) AND (9) - IF FORESEEN .
- JOIN BOTTOM (1), INTERNAL BASE (2) AND TOP (3) TO SIDE (4) (JOINT "A").
- INSERT BACK (6) IN THE SPECIAL MILLINGS; JOIN SIDE (5) TO PANELS (1), (2), (3) (JOINT "A"):
- APPLY FRAME (7) TO TOP (3) AND FIX (SCREW "S").
- APPLY FRAME (9) TO INTERNAL BASE (2) FIXING WITH SCREWS "S" IF AVAILABLE IN MODEL.
- APPLY SKIRTING BOARD (8) TO BOTTOM (1).
- FIX, ON THE REVERSE, BACK (6) TO INTERNAL BASE (2), (3) (SCREW "N").
- FIX HINGES BASES TO SIDES (4) AND (5).
- FIX HINGES AND LOCKS TO WOODEN AND GLASS DOORS (SCREW "N").
- APPLY, WITH SCREWS "N", DOOR-STOP "T" UNDER FRAME (9) IN CONNECTION WITH LOCK.
- FIX, WITH SCREWS "N", METAL PLATE "U" IN THE MARKED HOLES OF LEFT WOODEN DOOR.
- FIX WOODEN AND GLASS DOORS TO SIDE (4) AND (5).
- INSERT SHELF HOLDERS AND PLACE SHELVES.
- IN CASE OF APPROACHING OF TWO OR MORE BOOKCASE, JOIN THEM WITH SCREWS "E".

GOODFURNITURE

TECHNICAL DEPARTMENT

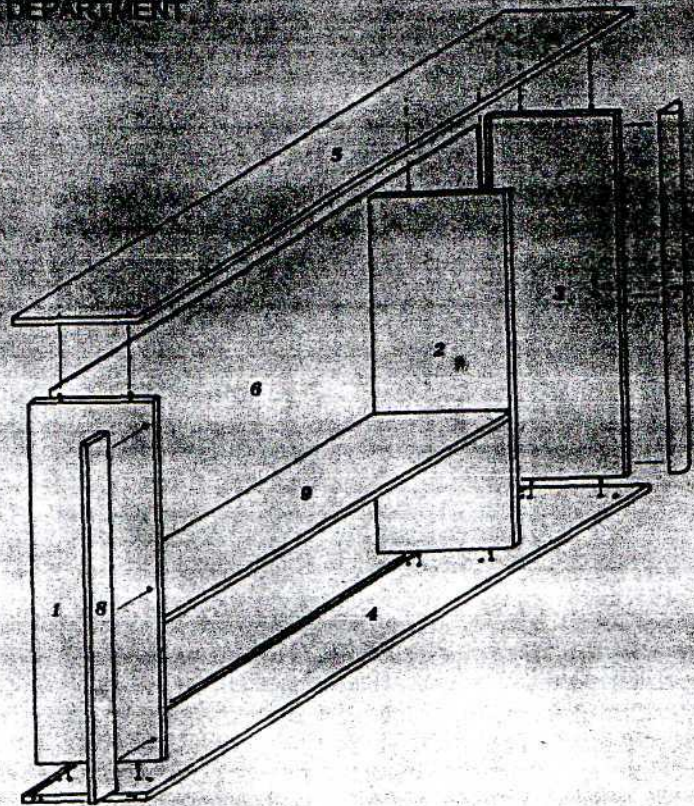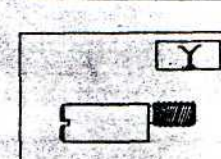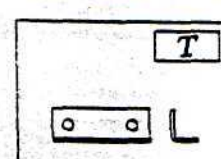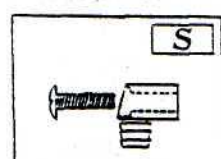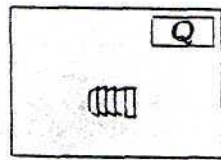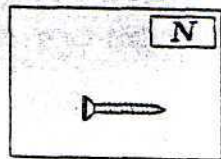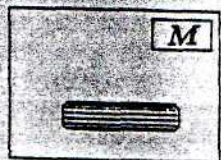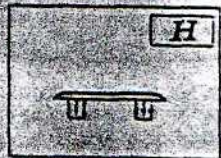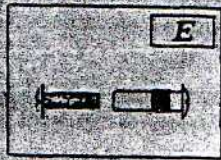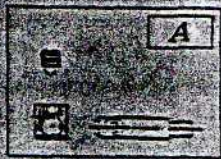

ASSEMBLING INSTRUCTIONS: "WARDROBE ART. ARM 005"

- APPLY NYLON BUSHES "Q" IN SUITABLE HOLES OF SIDES (4) (5), BOTTOM (1), INTERNAL BASE (2), FRAMES (7).
- APPLY TRAPEZOID JOINS "S" TO TOP (3).
- INSERT WOODEN PIN "M" IN SUITABLE HOLES OF BOTTOM (1), INTERNAL BASE (2), TOP (3) SKIRTING BOARD (8), INTERNAL SIDE (9).
- INSERT IN THE LOWER PART OF PLASTIC SLIDING "H" SIDES (4) (5).
- JOINT INTERNAL SIDE (9) TO BOTTOM (1), INTERNAL BASE (2) (JOINT "A").
- JOIN BOTTOM (1), INTERNAL BASE (2) TOP (3) TO SIDE (4) (JOINT "A").
- INSERT BACK (6) IN THE SPECIAL MILLINGS; JOIN SIDE (5) TO PANELS (1), (2), (3) (JOINT "A").
- APPLY FRAME (7) TO TOP (3) AND FIX (SCREW "S").
- APPLY SKIRTING BOARD (8) TO BOTTOM (1).
- FIX ON THE REVERSE, BACK (6) TO INTERNAL BASE (2), (SCREW "N" - 3 PCS).
- FIX HINGES AND LOCKS TO WOODEN DOORS (SCREW "N").
- FIX HINGES BASES TO SIDES (4) (5).
- FIX WOODEN DOORS TO SIDES (4) (5).
- INSERT SHELF HOLDERS AND PLACE SHELVES.
- APPLY LOCK PIN "Y" TO BOTTOM (1) TOP (3) AND ADJUST IT IN RIGHT POSITION.
- FIX COATHANGER UNDER INTERNAL BASE (2) (SCREW "N").

NOTICE:

TO AVOID THE FALLING FORWARD OF THE WARDROBE:

- A) FIX RELEVANT ANGLE PLATE ON TOP (3) AND TO THE WALL THROUGH PLASTIC PLUG.
- B) APPROACH WARDROBE TO OUR BOOKCASE AND JOIN IT (SCREWS "E").

IST74N - RM - REVISED: 24/09/1999